

Model: Honda 250R
Part No: FA-001-HA-13

Year: 2014+

Tools required:
8mm T-bar, 10mm T-bar, 4mm Allen key

1. Remove the seat, fairings and fuel tank by removing the bolts circled in figure 1. Also remove the plastic radiator guards/louvers.



Figure 1: Mounting bolts for the seat, fairings and fuel tank

2. Remove the 2 mounting bolts on the front of each radiator (Figure 2a) and remove the speed nut circled in yellow in figure 2a.
3. Bolt the radiator guards in place on each side. See figure 2b.
4. Slide the cable tie that is around the chassis tube in figure 2c toward the front of the bike.
5. Place the clamping block in place around the chassis tube as shown in figure 2c.

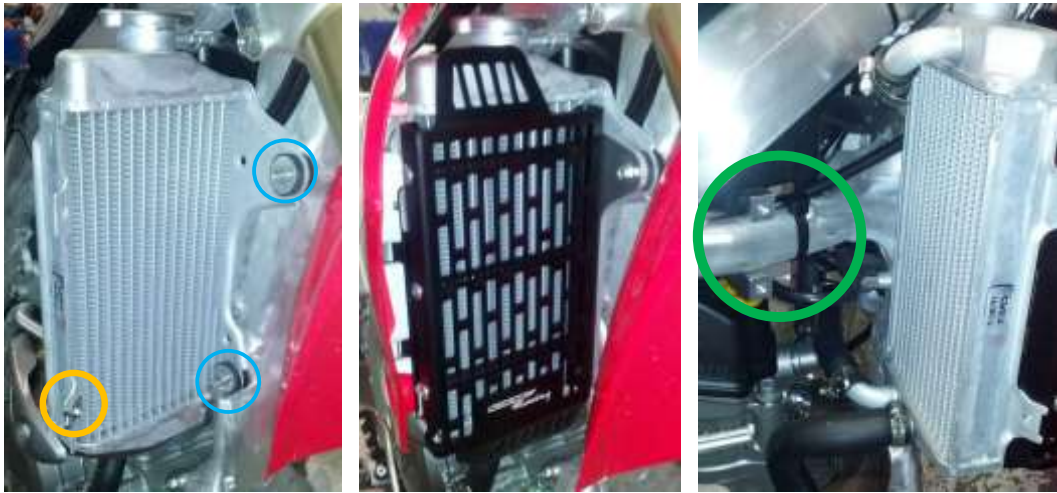


Figure 2: Fitting radiator guards and clamps (From left to right; a, b & c)

6. Bolt the guard brace to the guard and the clamps with the supplied bolts. (Figure 3) Be sure that the lower hole without a bolt in it lines up with the thread on the guard.



Figure 3: Fitting radiator braces

7. Refit the fuel tank, fairings and seat.