

Radiator Guard Installation Instructions

Model: KTM EXC XCF EXCF SX SXF (250 up) **Year:** 2008-15
 Husaberg TE FE **Year:** 2013-14
 Husqvarna TE TC FE FC (250 up) **Year:** 2014-15
Part No: FA-001-KT-09

Tools required:
10mm spanner, 8mm T-bar, 4mm Allen key, T30 Torx socket

1. Remove the seat, fairings and horn by removing the bolts circled in figure 1. Also remove the plastic radiator guards/louvers.



Figure 1: Mounting bolts for the seat, fairings and radiator shrouds

2. Remove the fuel tank bolt at the top of the tank (T30 Torx) which will allow for the tank to be rotated to enable easy access to the rear of the radiators.
3. Remove the 2 mounting bolts on the front of each radiator.
4. Put the inner brackets in place between the chassis and the radiators as shown in figure 2b.
5. Loosely bolt the rear bracket to the inner bracket as shown in figure 2b.
6. Fit the spacers to the guards (figure 2a) and tightly bolt the radiator guards using the two radiator-to-frame bolts on each side. See figure 2c.

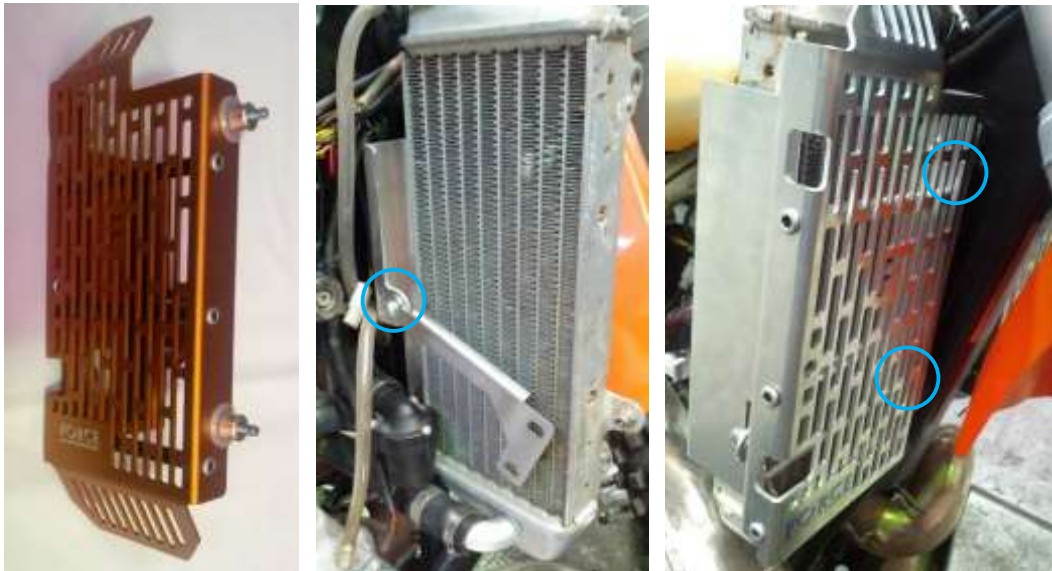


Figure 2: Fitting radiator brackets and guard (From left to right; a, b & c)

7. Loosely bolt the rear bracket to the radiator guard. Figure 3a
8. Tighten all 3 of the rear bracket mounting bolts.
9. Fit the horn using the bolt hole supplied on the front the radiator guard. Figure 3b



Figure 3: Fitting rear bracket and horn

10. Reconnect horn and refit the fuel tank, fairings and seat.