

## Radiator Guard Installation Instructions


**Model:** KTM XCF SX SXF (125 up)  
EXC  
Husqvarna TC/FC (125 up)  
TE/FE

**Year:** 2016+  
Year: 2017+  
Year: 2016+  
Year: 2017+

**Part No:** FA-001-KT-11

**Tools required:**  
8mm T-bar, 3mm and 4mm Allen key, 6mm T-bar

1. Remove the plastic radiator shroud, fairings and following bolts outlined below

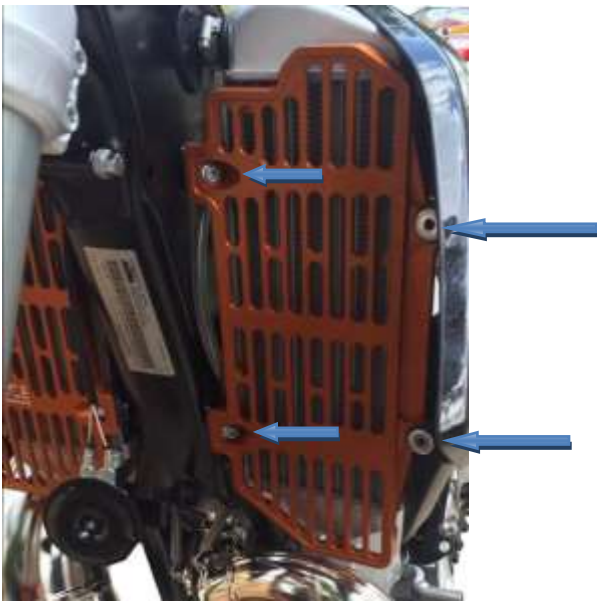

2. Bolt the billet L piece to the rear of the radiator guard using the 6mm countersunk screw. There are 2 threads in the back of the radiator guard. Use the top hole.



3. Bolt the radiator guard to the frame using the supplied bolts.

4. Bolt the 5mm plate to the L shaped part using the 5mm button head screws. The foam will squash up on the rear of the radiator on both sides. See image below



5. Fit the original shrouds back on and horn using the original bolt to the front of the radiator guard.
6. Use Loctite on the L piece and clamp



Bolt the billet L shaped piece onto the 6mm hole in the back of the radiator guard



Leave this plate loose until the billet L bracket is done up tight then tighten this at the end. You will need to remove it then it will clamp to the edge of the radiator

Tighten the counter sunk bolt to the thread at the back of the radiator guard