

Model: Husqvarna TE449
Part No: FA-005-HQ-05

Year: 2011-2013

Tools required:
13mm Socket, 6mm Allen key, 4mm Allen key,

1. Remove the Plastic Bashplate from the bike.
2. Fit the stainless steel rear brackets to the underside of the bike as shown in figure 1.

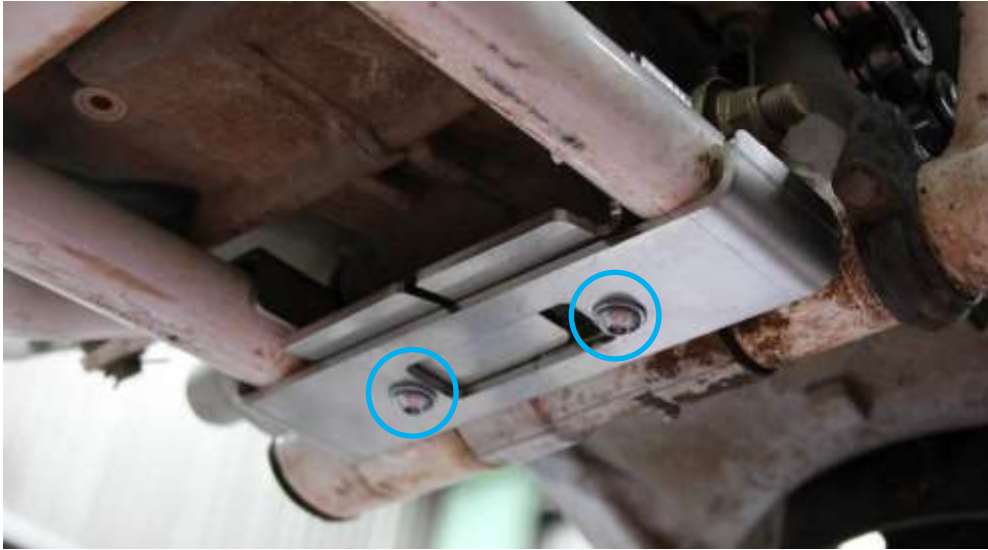


Figure 1 - Mounting of the underside bracket

3. Mount the front bracket to the front of the frame as shown in figure 2, ensuring that it is fitted in the correct orientation.

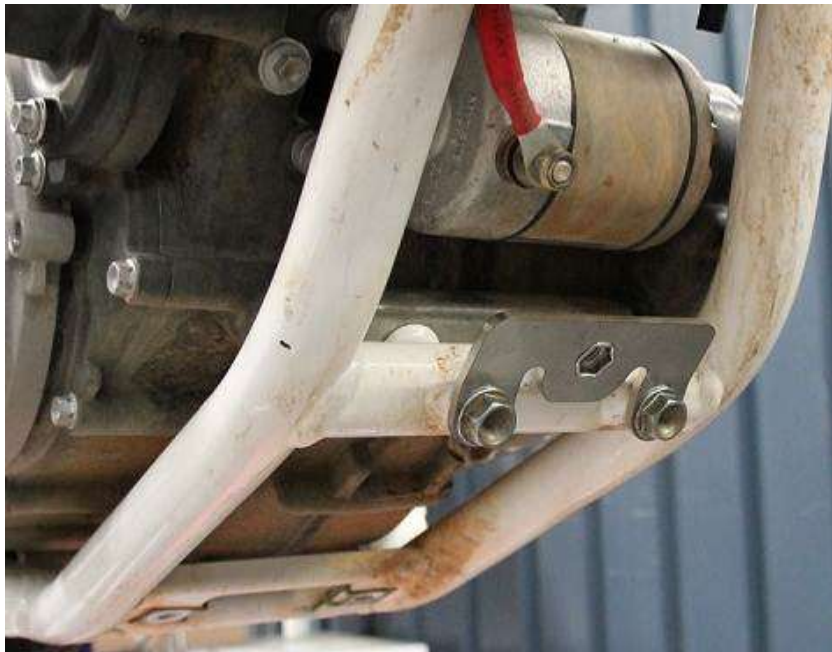


Figure 2 - Mounting of front bracket

4. Mount the Bashplate by first slotting it over the underside rear bracket. Then bolt the front of the Bashplate to the front bracket using the supplied M8 bolt.



Figure 3 - Mounted Bashplate